



HPG 335DAB

Manual

ENGLISH

HPG335DAB USER MANUAL

INFORMATION

Congratulations on your new radio. Please take a moment to read this manual. Enjoy.


Safety instructions.

Please store this instruction manual for future reference.

- Place the unit on a solid surface
- Please charge the product completely before using for the first time.
- Please remove the cable from the radio after charging.
- Only use USB 5V for charging.
- Please charge the battery on a fireproof surface and away from flammable items or liquids.
- Charging should only be done by an adult or under adult supervision.
- NEVER leave the charging unit unattended.
- Do not expose HPG335DAB to high humidity, direct sunlight, dirt, heavy vibration or extreme temperatures.
- Do not open the cabinet. Only qualified technicians are allowed to handle this radio internal parts.
- If service or repair is required, this must also be done by qualified technicians.
- User a duster or a slight damp, soft and non-fluffy rag to clean the cabinet. Do not use corrosive or strong cleaning agents. To prevent fire or shock hazards, please disconnect the charging cable when cleaning.
- In case of liquid leakage from the battery, do not touch with bare hands. If liquid gets into the eye, do not rub, please flush with plenty of clean water immediately and consult a doctor; if liquid gets onto the body and clothes, please clean with plenty of clean water and consult a doctor if necessary.

Disclaimer

Despite our best efforts we cannot guarantee that the technical data indicated are correct, complete and updated. We reserve the right to make technical changes without prior notice.

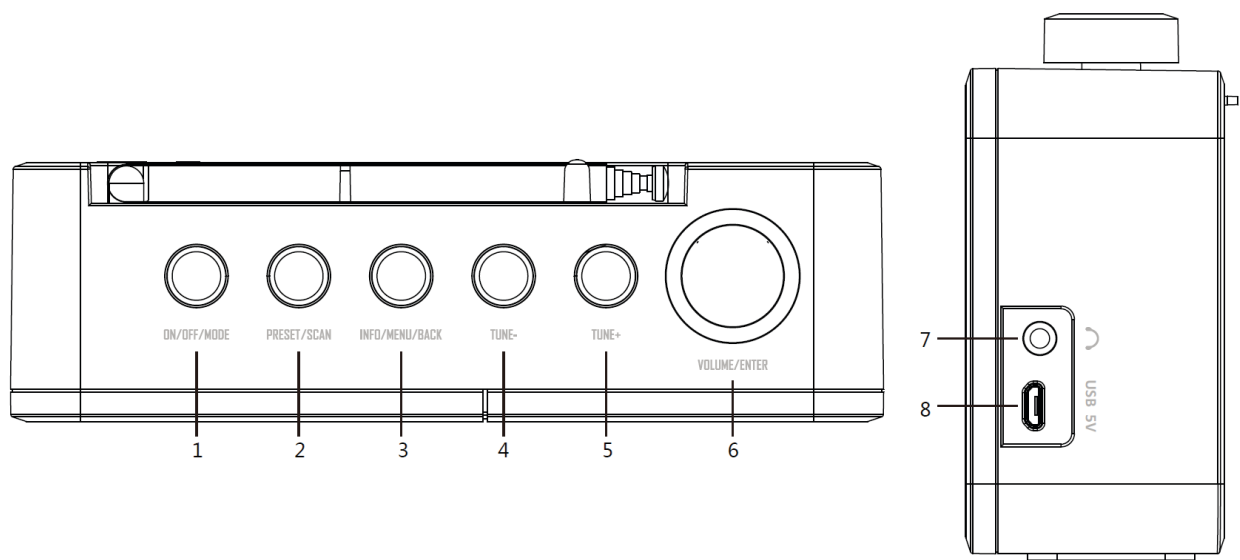

01 ON/OFF/MODE

Press to change modes DAB / FM

Short press to turn on the radio

Long Press to back to standby mode

02 PRESET/SCAN

Short press to preset station

Long press to auto scan

04 INFO/MENU/BACK

INFO Press to retrieve information from radio stations

MENU DAB Mode Long press to Station list / Full scan / Preset Recall/Preset Store/Manual Tune/ DRC / Prune /System

FM mode Long press to Audio Setting / Preset Recall/ Preset Store /Scan Setting/ System

BACK GO BACKWARD ON OPERATION

05 TUNE DOWN

Long Press to manual scan downwards

Short press to manual fine tune downwards

06 TUNE UP

Press to manual scan upwards

Short press to manual fine tune upwards

- 07 ROTARY VOLUME / ENTER Volume up / Down rotary control
Press to Enter or Select
- 08 PHONES Connect a 3.5mm audio cable or an earphone to this input for listening.
The main speaker shall be disabled when connected.
- 09 USB CHARGING PORT Use this to charge the radio

CONNECTING YOUR RADIO

Your radio is supplied with a Lithium battery, please avoid operating the unit under direct sunlight or in hot, humid or dusty places, and follow the safety instruction in this manual.

OPERATING YOUR RADIO – DAB

- 01 Carefully extends the telescopic antenna.
- 02 Press ON/OFF MODE button to switch on radio.
- 03 Press MODE to select DAB mode.
- 04 First time the radio is used a FULL SCAN will be carried out. If the radio has been powered off and turned back ON again, the last used station will be selected.
- 05 When scanning is completed the display shall indicate the number of found stations.
- 06 You may PRESET your favorite stations by pressing PRESET/SCAN button and use TUNE UP/DOWN buttons to Save Preset and select the desired position 1 to 30 and press ENTER to save.
- 07 When signal indicator is low is because of weak station signal or bad reception location.
- 08 If no Stations are found after scanning, the display will show NO STATIONS FOUND and it is necessary to relocate the radio to a position with better reception. If no DAB signal is received for 15 minutes, the unit return to standby mode automatically.

SELECTING A STATION – DAB

- 01 The display show the name of the station selected.
- 02 Press the TUNING - or TUNING + buttons to select the station.
- 03 Press ENTER to select.

PRESET STORE

The radio has PRESET RECALL function for DAB & FM that allows your radio station to be saved into 30 presets (30 for DAB & 30 for FM)

01 Long Press INFO/MENU/BACK > select PRESET STORE> press ENTER> PRESET 1-30

02 Rotating VOLUME/ENTER knob to select location to be saved

03 Press ENTER to save

PRESET RECALL

The radio has a PRESET CALL function for DAB & FM that allows you saved radio stations to be called out to play (30 for DAB & 30 for FM)

1 Long Press INFO/ MENU/ BACK > select PRESET RECALL> press ENTER> PRESET 1-30

02 Rotating VOLUME/ENTER knob to select saved stations.

03 Press ENTER to confirm.

INFORMATION SERVICES – DAB

Your radio shall display different information which can be selected by pressing the INFO button.

- | | |
|----------------------|--|
| 01 Radio text (DLS) | display text messages from the station. |
| 02 Program Type | shows the program type broadcast by the station. |
| 03 Ensemble | display the name of broadcaster of the DAB station. |
| 04 Station Frequency | displays the frequency of the selected station. |
| 05 Data Speed | displays the digital bit rate and mono/stereo of selected station. |
| 06 Signal Strength | shows the signal strength of the station. |
| 07 Power Source | shows Mains Power or Battery percentage |
| 08 Date / Time | displays the current date and time. |

MENU FOR DAB MODE

In DAB mode, long Press INFO/MENU/BACK button to enter to Menu list

- Full Scan The radio will scan all DAB station received
 - Preset Recall Saved radio stations to be called out to play
 - Preset Store The radio will store your favorite stations
 - Manual Tune The radio shows all DAB station frequency and the reception signal strength
 - DRC Select DRC level (High / Low / Off)
 - Prune Invalid Select to proceed to prune the invalid station
 - ** Please see below more details about Prune Invalid
 - *** Please see below more details about DRC (Dynamic Range Control)
 - System Sleep – Select Sleep Time from Off / 15 / 30 / 45 / 60 / 90 minutes
 Alarm – Select Alarm 1 or Alarm 2
 - Alarm (Off / On)
 - Frequency (Daily / Once / Weekends / Weekdays)
 - Wake Up Time (set wake up time by rotate and press ENTER knob)
 - Source (DAB/ FM/ Buzzer)
 - Duration (15/30/45/60/90 minutes)
 - Volume (minimum level 4 to maximum level 16)
- Time- Set Time / Date
- Auto Update (from Any / from DAB / from FM / No Update)
- Set 12/24 hour
- Set Date Format (DD-MM-YYYY / MM-DD-YYYY)
- Backlight – Timeout (On/10/20/30/45/60/90/120/180 seconds)
- On Level (High / Medium / Low)
- Dim Level (High / Medium / Low)

**

Prune invalid stations

If you move to a different part of the country, some of the stations which were listed may no longer be available. Also, from time to time, some DAB services may stop broadcasting, or may change location or frequency. Stations which cannot be found, or which have not been received for a very long time are shown in the station list with a question mark. The Prune stations function will delete the marked DAB stations from your station list.

From the DAB Menu list select Prune invalid stations to cause the invalid stations names to be removed from the list.

DRC (Dynamic Range Control) settings

Dynamic Range Control (also known as DRC) can make quieter sounds easier to hear when your radio is used in a noisy environment by reducing the dynamic range of the audio signal. From the DAB menu list select DRC to enter the DRC

adjustment mode. The current DRC setting will be highlighted on the screen. Select the required DRC setting the display will return to the previous screen.

'DRC Off' - DRC is switched off, Broadcast DRC will be ignored.

'DRC high' - DRC is set as sent by broadcaster.

'DRC low' - DRC level is set to 1/2 that sent by broadcaster.

Note: Not all DAB broadcasts use the DRC function. If the broadcast does not provide DRC information, then the DRC setting in the radio will have no effect.

OPERATION YOUR RADIO – FM

01 Carefully extend the telescopic antenna.

02 Press power button to turn on the radio

03 Press MODE to select FM mode

04 Long press TUNE DOWN / TUNE UP buttons to auto tuned downward / upward.

05 Short press TUNE DOWN / TUNE UP buttons to fine tune the station downward / upward.

DISPLAY MODES – FM

Your radio shall display below information by pressing the INFO/MENU button.

01 Radio Text shows the radio text broadcast by the station.

02 Program Type shows the program type broadcast by the station.

03 Station name shows radio station name.

04 Mono/Stereo displays if channel is playing in Mono or Stereo mode.

05 Power Source shows Mains Power or Battery percentage

06 Date/Time displays the current date and time

Note that these FM display mode information are only available when the radio is able to receive RDS information from the broadcaster.

MENU FOR FM MODE

Long press INFO button to enter Menu List

- Preset Recall Saved radio stations to be called out to play
- Preset Store The radio will store your favorite stations
- Scan Setting (Strong Station Only / All Stations)
- Audio Setting (Stereo Allowed / Forced Mono)
- System (refer to previous section mention on MENU FOR DAB the same)

PRESET STORE

The radio has PRESET RECALL function for DAB & FM that allows your radio station to be saved into 30 presets (30 for DAB & 30 for FM)

01 Long Press INFO/MENU/BACK > select PRESET STORE> press ENTER> PRESET 1-30

02 Rotating VOLUME/ENTER knob to select location to be saved

03 Press ENTER to save

PRESET RECALL

The radio has a PRESET CALL function for DAB & FM that allows you saved radio stations to be called out to play (30 for DAB & 30 for FM)

1 Long Press INFO/ MENU/ BACK > select PRESET RECALL> press ENTER> PRESET 1-30

02 Rotating VOLUME/ENTER knob to select saved stations.

03 Press ENTER to confirm.

LANGUAGE SET

The radio is a Multilanguage user interface.

01 Long Press MENU and rotate ENTER knob > System Settings > Language > English/ Francais / Deutsch / Italiano / Dutch

02 Press Enter to select

DIRECT SAVE DAB STATION (AUTO SCAN)

 
In FM/DAB mode, long press PRESET/SCAN button for 2 seconds. The received stations are automatically stored to preset numbers.

SNOOZE ALARM

When alarm sounds, press VOLUME/ENTER to activate the snooze time 9 minutes. The display shows Snooze time counting down, you can press ON/OFF/MODE to turn off the alarm completely.

SET SLEEP TIMER

1. In DAB/FM mode, hold INFO/MENU/BACK button, then rotating VOLUME/ENTER to select System then select SLEEP.
2. Rotating VOLUME/ENTER to select Sleep timer period circle as follow:



Remark:

In DAB/ FM mode, you can long press VOLUME/ENTER knob button to activate SLEEP TIMER.

SYSTEM RESET

If you encounter problems with your radio you may reset the radio to Factory Reset as follows

01 Long press MENU and rotate ENTER knob > System Settings > Factory Reset

02 Rotate ENTER to select YES / NO

03 Press ENTER to select

Important :

System reset is only available when power adaptor is connected.

SPECIFICATIONS

Band (Mode)	Portable DAB/ FM Radio
Output Power	0.8 Watts RMS
Loudspeaker	2.5" full range
Antenna	FM & DAB telescopic 400mm
Battery	1800-2000mAh
USB Input	DC 5V 1A
Outputs	3.5mm Phone
Dimensions	162mm (W) x 50mm (D) x 102.5 mm (H)
Weight (Net)	350g



Declaration of conformity

GB Caliber hereby declares that the item HPG335DAB is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU (RED) and 2011/65/EU (RoHS).

FR Par la présente Caliber déclare que l'appareil HPG335DAB est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU (RED) et 2011/65/EU (RoHS).

DE Hiermit erklärt Caliber, dass sich das Gerät HPG335DAB in Übereinstimmung mit den grundlegenden Anforderung und übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU (RED) und 2011/65/EU (RoHS) befindet.

IT Con la presente Caliber dichiara che questo HPG335DAB è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU (RED) e 2011/65/EU (RoHS).

ES Por medio de la presente Caliber declara que el HPG335DAB cumple con los requisitos esenciales y otra disposiciones aplicables o exigibles de la Directiva 2014/53/EU (RED) y 2011/65/EU (RoHS).

PT Caliber declara que este HPG335DAB está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/EU (RED) e 2011/65/EU (RoHS).

S Härmed intygar Caliber att denna HPG335DAB Pro står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU (RED) och 2011/65/EU (RoHS).

PL Niniejszym Caliber oświadcza, że HPG335DAB jest zgodne z zasadniczymi wymaganiami oraz innymi stosownymi postanowieniami Dyrektywy 2014/53/EU (RED) i 2011/65/EU (RoHS).

DK Undertegnede Caliber erklærer hermed, at følgende udstyr HPG335DAB overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU (RED) og 2011/65/EU (RoHS).

EE Käesolevaga kinnitab Caliber seadme HPG335DAB vastavust direktiivi 2014/53/EU (RED) ja 2011/65/EU (RoHS) põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

LT Šiuo Caliber deklaruoja, kad šis HPG335DAB atitinka esminius reikalavimus ir kitas 2014/53/EU (RED) ir 2011/65/EU (RoHS) Direktyvos nuostatas.

FI Caliber vakuuttaa täten että HPG335DAB tyyppinen laite on direktiivin 2014/53/EU (RED) ja 2011/65/EU (RoHS) oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

IS Hér með lýsi Caliber yfir því að HPG335DAB erí samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU (RED) og 2011/65/EU (RoHS).


NO Caliber erklærer herved at utstyret HPG335DAB er i samsvar med de grunn-leggende krav og øvrige relevante krav i direktiv 2014/53/EU (RED) og 2011/65/EU (RoHS).

NL Hierbij verklaart Caliber dat het toestel HPG335DAB in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU (RED) en 2011/65/EU (RoHS).



Latest declaration form can be found at:

https://calibereurope.com/nlmedia/manuals/HPG335DAB_QSG.pdf

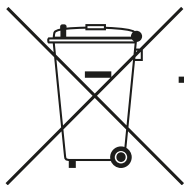

GB Old appliances and/or batteries must not be disposed with garbage!

If the device/battery can not be used anymore, every user is legally obliged to dispose of old appliances and/or batteries separated from the garbage, e.g. at a collection point of his municipality/district.



FR Les vieux appareils et/ou les piles ne doivent pas être jetés avec les ordures ménagères !

Si l'appareil/la pile ne peut plus être utilisé(e), chaque utilisateur est légalement dans l'obligation de mettre au rebut les vieux appareils et/ou les piles séparément des ordures ménagères, par ex. dans un point de collecte de sa municipalité/de son quartier.

DE Altgeräte und/oder Altbatterien müssen getrennt entsorgt werden!

Benutzer sind gesetzlich verpflichtet, Altgeräte und/oder Altbatterien am Ende ihrer Nutzungsdauer getrennt zu entsorgen, z.B. an örtlich verfügbaren Sammelstellen.

IT Dispositivi e/o batterie vecchie non devono essere smaltiti con i rifiuti!

Se il dispositivo/batteria non può più essere utilizzato, ogni utente è obbligato per legge a smaltire i vecchi dispositivi e/o batterie separatamente dai rifiuti, ad es.: in un centro per la raccolta differenziata locale/comunale.

ES ¡Los dispositivos viejos y/o baterías no deben desecharse junto con la basura doméstica!

Si el dispositivo/batería ya no funciona, cada usuario está legalmente obligado a desechar sus aparatos y/o baterías de forma separada de la basura doméstica (por ejemplo, en un punto de recolección de su municipio/distrito).

PT Os aparelhos avariados e/ou as pilhas ou baterias usadas não devem ser eliminados juntamente com o lixo comum! Se o aparelho e/ou as pilhas ou baterias já não puderem ser utilizados, o utilizador tem o dever legal de separar os aparelhos e as pilhas/baterias usados do lixo comum e depositá-los num ponto de recolha para reciclagem na sua região

SE Gamla apparater och/eller batterier får inte kasseras med avfall!

Om enheten/batteriet inte längre kan användas är varje användare skyldig att slänga gamla apparater och/eller batterier avskilt från avfallet, t.ex. på en insamlingsplats i personens kommun/distrikt.

PL Starych urządzeń i baterii nie wolno wyrzucać z odpadkami domowymi!

Jeśli urządzenie lub bateria nie będzie więcej używane, każdy użytkownik jest prawnie zobowiązany do wyrzucania starych urządzeń i/lub baterii oddzielnie, np. w punkcie zbiórki swojej gminy lub dzielnicy.

GR Οι παλιές συσκευές ή/και μπαταρίες δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα!

Αν μια συσκευή/μπαταρία δεν μπορεί πλέον να χρησιμοποιηθεί, οι χρήστες είναι νομικά υποχρεωμένοι να απορρίπτουν τις παλιές συσκευές ή/και μπαταρίες ξεχωριστά από τα οικιακά απορρίμματα, π.χ. σε σημείο συλλογής του δήμου/της περιφέρειάς τους.

SK/CZ Staré spotrebiče a/alebo použité batérie nesmiete likvidovať s domovým odpadom!

Ak sa už zariadenie/batéria nebude dať viac používať, každý používateľ je povinný likvidovať staré spotrebiče a/alebo batérie oddelene od odpadu, napríklad na zbernom mieste svojej obce/regiónu.

NL Oude apparaten en/of batterijen mogen niet bij het huisvuil!

Mocht het apparaat/batterij niet meer kunnen worden gebruikt, dan is iedere gebruiker wettelijk verplicht, oude apparaten en/of batterijen gescheiden van het huisvuil, bijv. bij een inzamelpunt van zijn gemeente/zijn wijk, af te geven.



**APPAREIL ET
EMBALLAGES À TRIER**

**Pour en savoir plus :
www.quefairedemesdechets.fr**

WWW.CALIBEREUROPE.COM

CALIBER EUROPE BV • Kortakker 10 • 4264 AE Veen • The Netherlands