



RDD 802BT MANUAL

ENGLISH

INSTALLATION

Tools for Installation

Use the 2 removal wrenches of the old unit to take out the old unit and place with this brand new car radio. The following tools and supplies may also be needed for the installation:

Tools for Installation: Philips Screw-drivers /Machine Screws /Wire Stripper /Wire Cutter /Hammer /Pencil /Electrical Tape /Electric Drill

Supplies for Installation: Machine Screws /Crimp Connectors /14 Gauge Wire for Power Connections /14-16 Gauge Speaker Wires

The above are not supplied.

Before you install


Automotive audio equipment installations can be challenging even to the most experienced of installation technicians. We strongly recommend that this unit should be professionally installed by a VAT registered installer (this is a requirement to validate the warranty).

IMPORTANT: Remove the two transport screws from the top of the unit before installing.


Remove the Old Unit from the Dashboard

1. Remove the outer trim frame.

DIN Front Mount

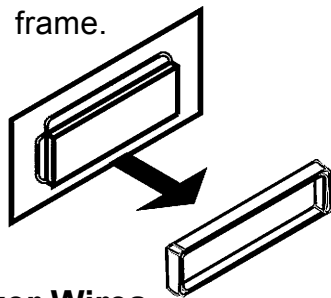

2. Insert the keys supplied with the old unit into both sides of the unit as shown in figure below until they click. Pull to remove the old unit from the dashboard.

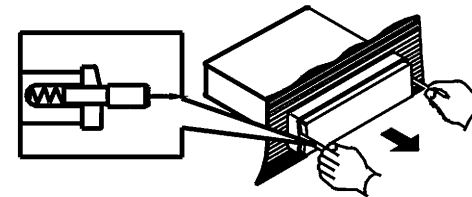

**DO NOT DISCONNECT WIRES
AT THIS TIME!**

Mark Polarity of the Speaker Wires

Marking the polarity of the speaker wires will make it easier to connect the existing speakers to your car radio. Consult wiring diagram of existing head unit before disconnecting any wires. If you are not positive of the polarity of the existing wires from the speakers to the head unit, install new wires.

1. While the old unit is playing, disconnect the wires from one speaker.
 2. Take a length of masking tape and fold it around the wire so it forms a flag.
 3. On the masking tape mark the polarity of the speaker wires (+&-), as well as left or right, and front or rear.
 4. Double check that you marked the first speaker correctly by checking that the speaker wires are the same at the head unit.
 5. Repeat this procedure for all of the speakers.
 6. Mark the power, ground, and any other wires also.
-

INSTALLATION



WARNING: Disconnect negative battery terminal from battery before starting installation. Consult the vehicle's owner's manual for proper instructions.

NOTE: Mark the polarity of the existing speaker wires before disconnecting battery.


NOTE: Remove the two transport screws from the top of the unit before installing.

NOTE: Make sure there is enough space for the installation of this double-din unit.

SUPPLIED TOOLS

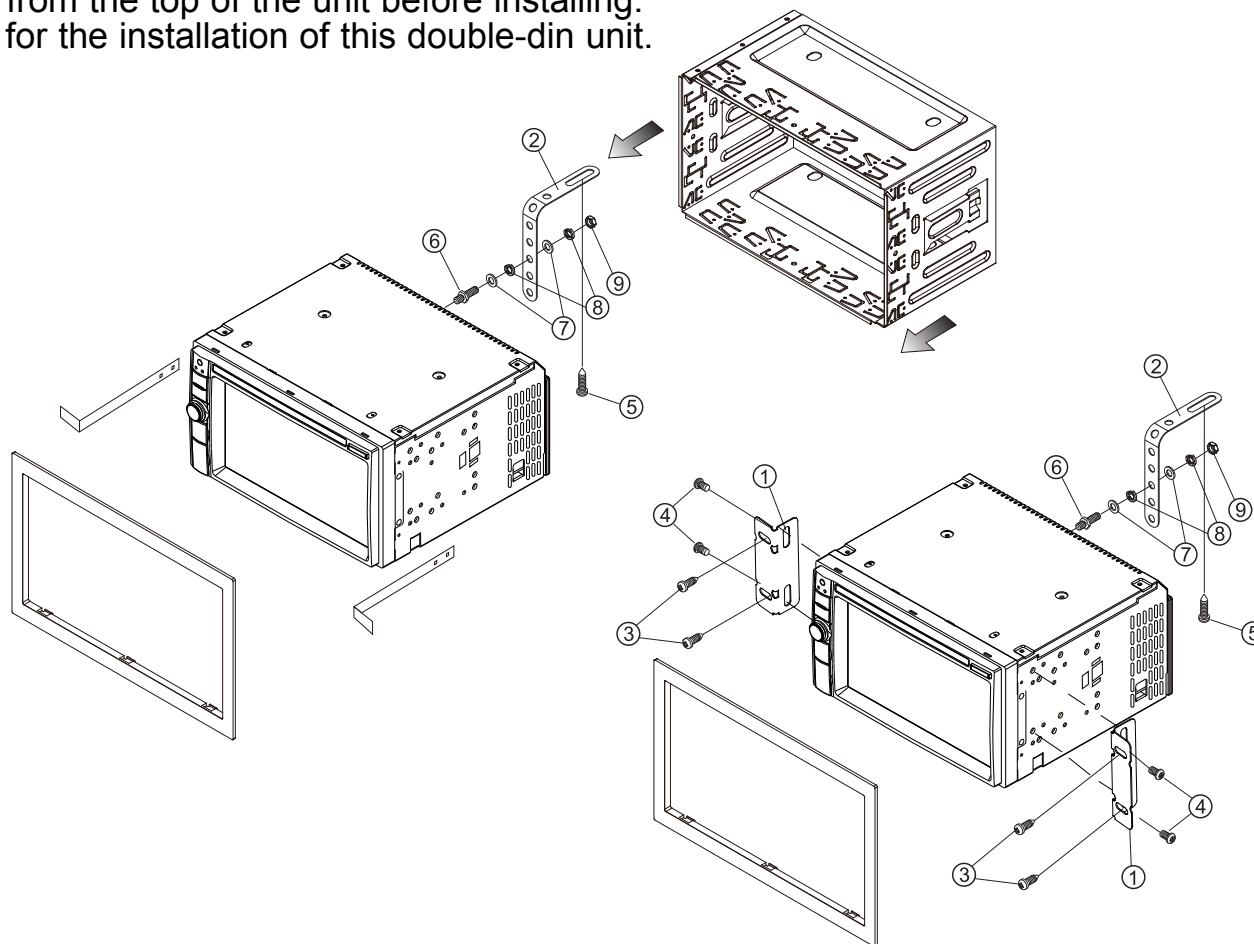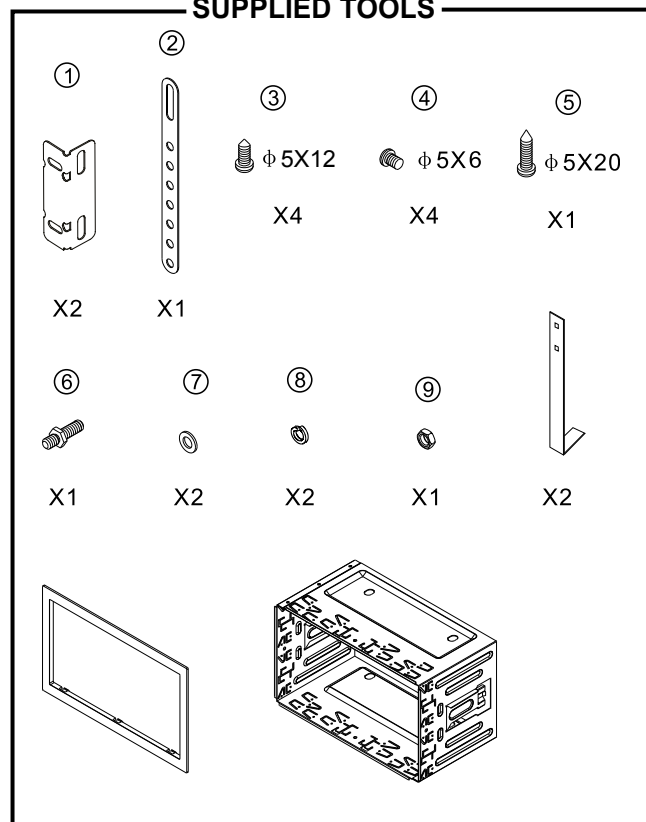

WIRING DIAGRAM

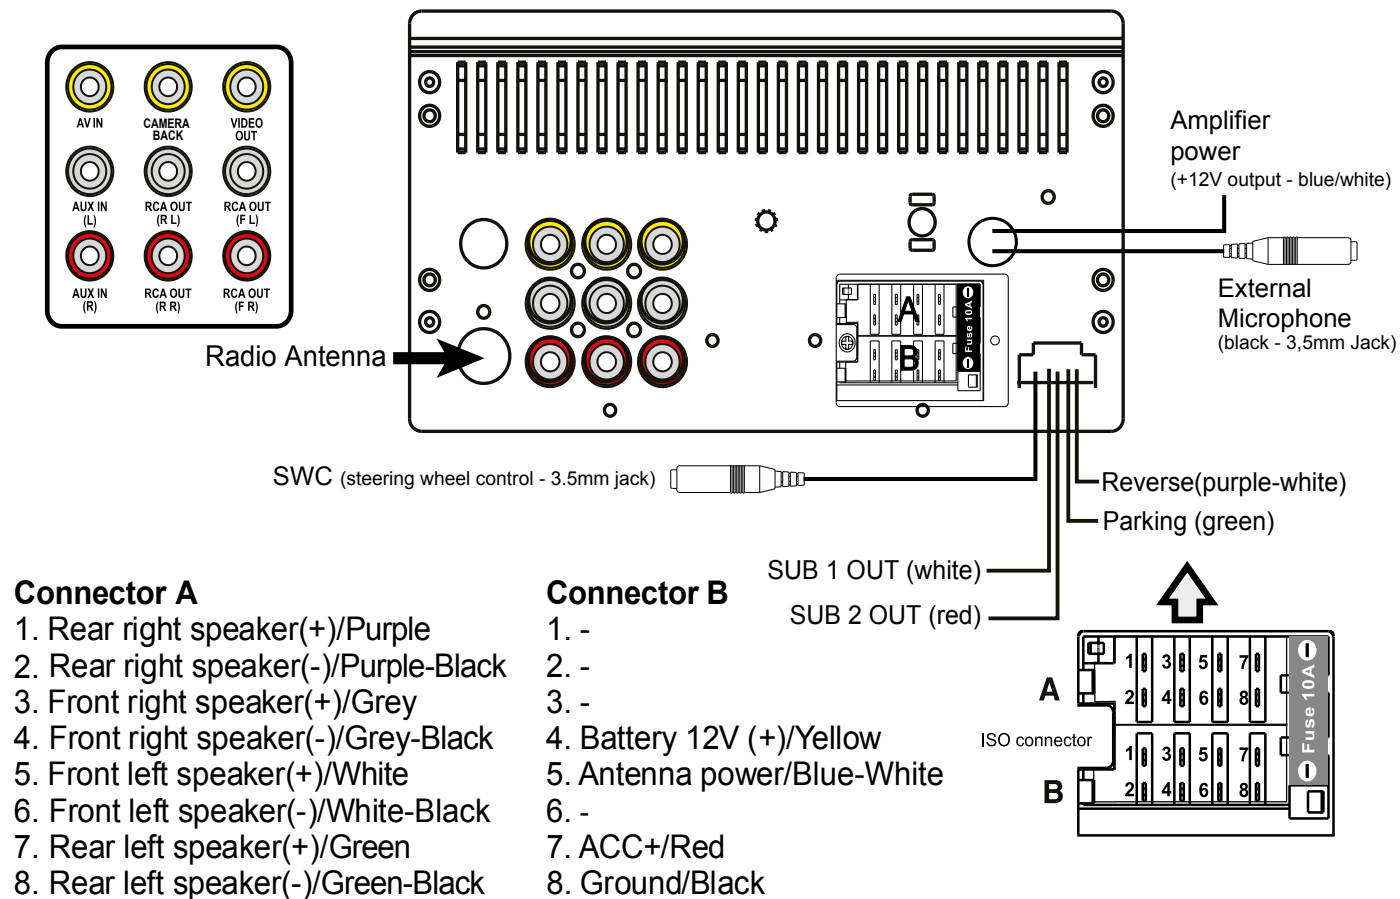

WIRING DIAGRAM

General Wiring Notes:

Make sure You have a good chassis ground. Good ground connection will eliminate most electrical noise problems. A good chassis ground requires a tight connection to the vehicle's metal chassis. The area around the ground connection should be clean, bare metal without rust, paint, plastic, dust, or dirt for a good ground connection.

Black Ground

Connect to vehicle body/chassis. Make sure you have a good chassis ground. This will eliminate most electrical noise from the motor and alternator. A good chassis ground requires a tight connection to ground. The area should be free from rust, paint or any form of dirt.

Red Ignition

Connect to car ignition switch for main power supply of the unit.

Yellow Memory Backup

Connect to electrical terminal always supplied with power regardless of ignition switch position.

Blue-White Remote

Connect to Auto-antenna or power amp control wire/remote connection. Maximum current 300mA 12VDC. (Low Current)

Green (Hand Brake - Ground)

Connect this wire to the hand brake wire of your car so that the display will be on only when the car is fully stopped.

Purple-White (Rear Gear - VCC)

Connect this wire to the rear gear wire of your car so that the backup camera function can be activated when your car is in reverse gear.

Speaker Wiring Notes:

Follow the above wiring diagram to install the head unit with new or existing speakers.

1. This unit is designed for use with four (4) speakers with impedance between 4 Ohms to 8 Ohms.
 2. An Impedance load of less than 4 Ohms could damage the unit.
 3. Never bridge or combine the speaker wire outputs. When not using four speakers, use electrical tape to tape the ends of the unused speaker outputs to prevent a short circuit.
 4. Never ground the negative speaker terminals to chassis ground.
-
-

Specifications

GENERAL

Operating Power.....12 Volts DC, Negative Ground
Output Wiring.....Designed for using four speakers only
RCA line out.....low-level outputs - 1000MV
Output Impedance.....Compatible 4 to 8 Ohm Speakers
Fuses.....10 amp
Dimensions.....128mm(W) x 125mm(D) x 100mm (H)
Weight.....2.8 Kg

DVD/VIDEO/SYSTEM

Discs compatible.....DVD, VCD 1.0/1.1/2.0/3.0, MP3, CD, CD-R, CD-RW, PICTURE-CD
Video System.....AUTO / PAL / NTSC

TFT/SYSTEM

Resolution.....800RGB(H)X480(V)
Brightness/Contrast.....400cd/m²/600
Viewing angle.....70
Response Time.....Tr-2s/Tf-6s
Aspect Ratio.....16:9

FM/TUNER

Tuning Range..... (USA) - 87.5 - 107.9MHz, (Europe) - 87.5 - 108 MHz
FM Sensitivity.....12dBu
Stereo Separation @ 1 Khz.....35dB

AM/TUNER

Tuning Range..... (USA) - 530 - 1710 KHz, (Europe) - 522 - 1620 KHz
Am Sensitivity.....30dBu

BASIC OPERATION

1. Tuning the unit On / Off

Press the Power Button to turn the unit on. The opening screen of the unit will be showing on the TFT monitor. Press and hold the POWER button again to turn the unit off.

2. Turning the TFT On / Off

During any play mode, press the Power Button once to turn the TFT screen off for screen saving and avoid distraction while driving. The sound will continue to play. Press the Power Button again to turn the TFT screen back on.

3. Mode Selection

Press the MOD Button on the front panel to cycle the Play Mode between RADIO, DISC, USB, SD, AV in and TV. Play mode can be chosen by touching on the Main User Interface also.

4. Sound Control

A. Volume

Use the VOL +/- Button to adjust the volume level. Turn the button clockwise to increase the volume, and vice versa. The larger the number of volume, the higher the volume level. You can also adjust the volume by sliding the volume icon on top of the screen.

B. Bass

Press the SEL Button until the display shows "BAS". Use the VOL +/- Button to adjust. When EQ is ON, bass control is not available.

C. Treble

Press SEL Button until the display shows "TRE". Use the VOL +/- Button to adjust. When EQ is ON, treble control is not available.

D. Balance

Press SEL Button until the display shows "BAL", then use the VOL +/- Button to adjust the balance between the left & right speakers.

E. Fader

Press SEL Button until the display shows "FAD", then use the VOL +/- Button to adjust the balance between the front & rear speakers.

F. Other Audio Settings

You can adjust other audio settings like preset equalizer or loudness by tapping the "EQ" icon on the main menu, or on the control menu of other audio/video play modes.

5. MENU Button

- In Radio and Aux modes, press the "MENU" button to go back to the home screen.

- In USB and SD modes, during music or video playback, press the "MENU" button once to go back to the directory page, in which you can choose the desired file by pressing and turning the volume knob. Press again the "MENU" button to go back to the home screen.

6. Eject Button

Press the Eject Button on the front panel to eject DVD or CD disc.

BASIC OPERATION

7. SETUP

Enter the setup menu in the home screen by tapping the “SETTING” icon on the main menu. Tap the items you would like to set. You can adjust audio, date and time, language, cabibration, wallpaper,etc.

8. Day Light Saving

Tap the Day button on the OSD to increase brightness. Tap again to reduce brightness during night time. Tap again for black out the screen.

Radio Operation

1. Choose Radio Band

Touch the AM button on screen to choose among the five radio bands - three FM Bands (FM1, FM2, and FM3) and two AM Bands (AM1, and AM2). Each of the five bands can store up to six preset stations, for a total of 30 preset memory stations.

2. Radio Seek Function

In Radio Mode, touch and hold > or < Button to adjust the radio frequency automatically. Press the button once to adjust the radio frequency manually.

3. Save Your Preset Stations

There are six numbered preset buttons on the the screen (P1-P6) which can store and recall stations for each band. While listening to a radio station you would like to save as a preset, touch and hold any key from P1-P6 until you hear a beep. The station will be saved in the designated number.

4. Mute

Touch the mute button to mute the unit. Touch again to disable the mute.

5. Mono/Stereo Reception Control

In FM radio mode, touch the ST button to select stereo or mono reception.

6. Local/Distance Reception Control

In radio mode, touch the LOC button to select local or distance reception.

7. RDS Control (Optional)

AF, TA, PTY are the RDS functions. They are applicable to certain countries only. For countries when RDS is not available. The touch sensitivity of the button will be disabled.

8. Returning to Main User Interface

Touch the "BACK" button or "MENU" button to return to the main user interface.

DVD/VCD/CD Operation

1. Selecting Tracks

Press the SEEK >>| Button to advance to the next track. Track numbers will be shown on the display. Press the SEEK >> to fast forward.

Press the SEEK <<| Button to go to a previous track. Track numbers will be shown on the display. Press the SEEK << Button to fast reverse. Press >|| button, disc will pause to play, Press it again disc will play again. On the Remote Control, use the |<< or >>| Buttons.

2. Insert / Eject CD

Press the Eject button to open the disc window. Insert a disc into CD slot with label side up. The disc will be automatically loaded into the unit. The unit will display the opening screen with loading status and the disc will play automatically. Press the EJECT Button to eject the disc from the slot. If the disc is not removed from the slot within 10 seconds, it will automatically be loaded into the slot again. When the disc is ejected and removed (or not removed), the unit will automatically switch to radio mode.

3. Audio Setup

Tap to enter audio setup which is also available in the SETTINGS LOGO in the OSD

4. Control of DVD/CD functions

The control of DVD/CD functions is by the touch menu onscreen or by remote control. The functions described below can be found in either way. To access onscreen touch menu, touch the center of the screen and the menu will appear below. Touch the arrow button on the right to toggle between the 3 pages of onscreen menu to adjust functions described below.

5. OSD (Display information)

Press the OSD button so that the OSD will display on the monitor. Details such as title, track, playtime, etc, will be shown.

6. DVD System Setup

Press the setup button to enter the DVD system setup. DVD system setup include password setting, rating level, region codes.

7. Navigation Key/Cursor (Up/Down/Left/Right) Buttons

a. Press MENU key title button to activate the DVD disc menu use on the screen, choose the desired item with cursor buttons. Press "ENTER" button to confirm the selected and start playing.

b. In picture play mode, press cursor buttons to choose the image display mode.

DVD/VCD/CD Operation (Con'd)

8. Track Search

Press the GOTO button to search the desired track to play the Disc. The OSD will be prompted. Make use of the navigation keys and digit keys on the touch screen to choose your desired chapter, track. Press the ENTER button to confirm your selection.

9. Repeat Function

Press the Repeat button to toggle between repeat chapter, repeat title, repeat all and repeat off.

10. Menu Playing (for DVD only)

Tap so that the menu of the disc will be prompted

11. Audio Selection (for DVD only)

Press the AUDIO button on the remote control, in order to choose the audio language. The audio languages available differ from Disc to Disc. You can also use the setup menu to confirm. Refer to the packing of the Disc for details.

12. Title Playing (for DVD only)

Press the TITLE button so that the first title track of the DVD will be played.

13. Subtitle Selection

Press the Sub-T button to choose the sub-title you want. The sub-title languages available differ from Disc to Disc. You can also use the setup menu to confirm. Refer to the packing of the Disc for details.

14. Zoom +/-

Press the zoom + / zoom - button to amplification / narrow 2/3/4 times.

15. Multi-Angle View

Press the ANGLE button on the remote control to perform multi-angle playback. The number of angles change in sequential order.

Note: The number of angles is different according to the disc. The function only work for discs having scenes recorded at different angles. When no different angle is recorded, the OSD will show "00"

16. Programme Mode

Press the PROG button on the remote control to set the program play. Use the Navigation and Digit keys to set the Chapter and Track no. as your desired sequence. Press Enter to begin the program play. Press the PROG button and confirm a blank program again to cancel this operation.

DVD/VCD/CD Operation (Con'd)

17. Electronic Skip Protection

This unit is programmed with Electronic Shock Protection (ESP) so that the video will be protected against rough roads for 5 seconds.

18. Returning to Main User Interface

Press the “BACK” button or “MENU” button to return to the main user interface.

Mixed Disc / USB-SD Operation

While you are playing mixed disc, USB, or SD card which contains MP3, WMA, JPG or DIVX formats, the unit will directly play the audio files. However, you can tap the “PREVIOUS” button to go back to the initiate selection among MUSIC, MOVIE and PICTURES. Tap the category you prefer and follow through the folder/file selection to play the specific file you would like to enjoy. You can press the “FILE” button to choose the file to beplayed.

Bluetooth Operation

PAIRING

At BT mode, search bluetooth device by the phone and “RDD802BT Caliber” will appear in your phone. Input “0000” as password to establish connection.

DIAL PAD

Touch the dial pad to dial the number you would like to call. Touch the CALL (green) button to send the number.

CALL RECORD

Press the HISTORY button to enter the phone book page to view received, missed and dialed calls. More details in the next page.

A2DP

Press the MUSIC button to enter the A2DP page to control playing music of your cellphone. More details in the next page.

REJECT CALL

Press the REJECT (red) button to end the call or to reject an incoming call.

RETURN TO USER MANUAL

Touch the arrow key on the top right corner to return to the main user interface.

View Received Calls

Touch the RECEIVED CALLS button, the received calls will be displayed. There will be up/down arrows displayed for you to view them one by one.




View Missed Calls

Touch the MISSED CALLS button, the missed calls will be displayed. There will be up/down arrows displayed for you to view them one by one.

View Dialed Calls

Touch the DIALED CALLS button, the dialed calls will be displayed. There will be up/down arrows displayed for you to view them one by one.

Playing Music on your cellphone

After activating music player in the cellphone, touch  on screen to play or pause the music. Touch  and  to select up or down one song in your song list.

Settings

General Setting

The general setting menu includes wallpaper, logo, Key Beep, radio region, RDS region, aspect ratio, warning, calibration.


Time Setting

You can select Date, Time, Time mode and Time zone by tapping > directly on the options or the arrows for up/down. Tap "BACK" after the setting to take effect.

Language Setting


There are different languages to select. You can select the language you want for OSD, disc menu, disc audio and disc subtitle.

INFRA RED REMOTE CONTROL

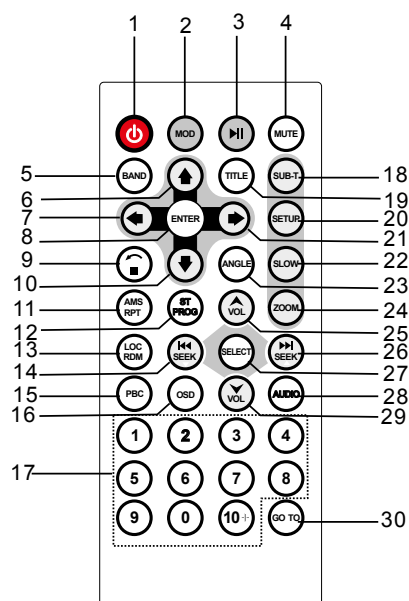


1. Power on/off
2. Mode Select Key
3. Play / Pause Function
4. Mute Sound Function
5. Band Select
- 6/7/10/21. Cursor Button in Menu Mode
8. Confirm The Track/Chapter Selected or Select Item In SETUP Menu
9. Stop Playback
11. Repeat Play Function
12. Program The Tracks To Be Played/Stereo Selection
13. Random Play Function
- 14/26. Track Up / Down or Fast Forward / Backward
15. PBC Play Mode
16. Statistical Disc Information Display Button
17. Number Select Key
18. Subtitle Language Switching Key
19. Show All Track's Title (DVD only)
20. Display SETUP Menu
22. Play DVD in Slow Advance
23. Watch The DVD Content From Different Angle
24. Zoom In and Zoom Out Function
- 25/29. Adjust Volume Level
27. Sound Select Button
28. Change The Audio Output Method
30. Track Time Search


This unit comes with a full remote control system. The CR-2025 Lithium battery is an included item with the remote control. TO PLACE THE BATTERY:

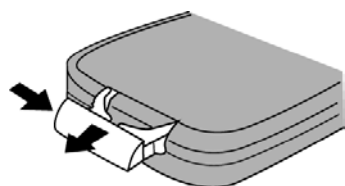

(1) Remove the cover from the back of the remote control.

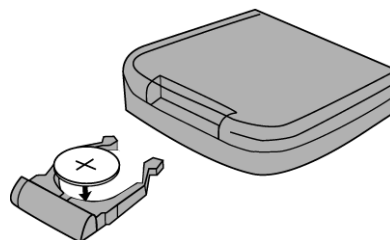

(2) Insert a CR-2025 Lithium battery.

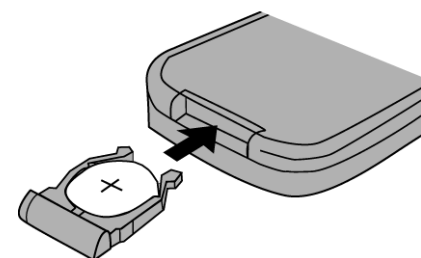

(3) Insert the battery holder into the back of the remote control.

Operating the remote control

Aim at the face panel of the CD Receiver, the maximum distance at which signals can be received is about 6M. Make sure that the signal path is not obstructed. Do not drop or throw the remote control. Do not place the remote control in a location that is exposed to direct sunlight or next to a heating unit or other heat source.

WWW.CALIBER.NL

CALIBER EUROPE BV • Kortakker 10 • 4264 AE Veen • The Netherlands • Tel: +31 416-699 000